


# Start-Up Instructions

1. Connect electrical cord to an approved electrical outlet.
2. Set thermostat to desired room temperature.
3. This heater has a rocker selector switch located on the back of the heater near the burner end access panel. This switch allows you to either heat or ventilate (no heat). See Fig. 13 for selector switch positions.


**FIG. 13**

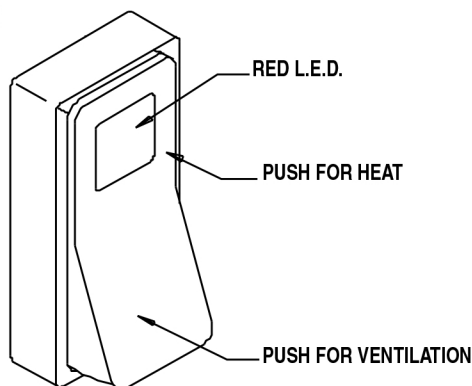

## A. Heating

- a. Open all manual fuel supply valves. Check for gas leaks using an approved leak detector. The gas control valve on the heater has a manual shut-off feature incorporated into the valve assembly. Ensure the indicator on the valve is positioned to ON. See Fig 14.
- b. When the selector switch is positioned to heat, a red light within the switch will be on. The fan motor will start, the igniter will spark and ignition will occur. The thermostat will cycle the heater on or off based upon temperature setting.

**FIG. 14**

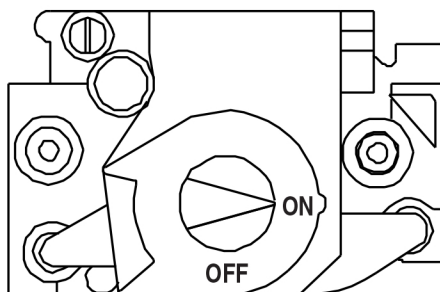

## B. Tips

Most customers turn the thermostat on full blast.

2. It takes about 20 seconds to start blowing hot air.

## ATTENTION

If the heater does not blow hot air or stops blowing hot air, it may need to be reset.

In that case, you need to open the doors on each end of the unit, then press the red buttons inside the heater to reset the electrical system.

# Shut-Down Instructions

1. Close the gas supply valve located on the propane gas supply container.
2. Allow the heater to burn off any fuel gas remaining in the gas supply line.
3. For heaters so equipped, set the thermostat to "Off" or "No Heat".
4. Position selector switch to "Off."
5. Disconnect the heater from its gas and electrical supplies.